

IPD-EXT BOX

Install Instructions for: Extender Box for IPD-Hub 2

The EXT-BOX sends local audio to multiple IPD-Hub 2 units within a zone. It splits the audio from a local Atterotech Axiom device or RDL Format A sender to all the IPD-Hub 2's in a zone. If using more than five IPD-Hub 2 units in a zone, use additional EXT-BOX's.

1. Connect the RDL or Atterotech device to the RVC input.
2. Connect the RVC output to the EXT-BOX main input.
3. Connect the EXT-BOX main out to the IPD-Hub 2 yellow port that will be calibrated to the RVC.
4. Connect up to four additional IPD-Hub 2's yellow input ports to the EXT-BOX outputs 1-4.

Note: If using more than five IPD-Hub 2's in a zone, connect one extender output to a second EXT-BOX main input. Then connect up to five additional IPD-Hub 2 units.



1.855.663.5600 | www.soundtube.com

© 2020 MSE Audio, and SoundTube Entertainment, Inc. All rights reserved. | Rev 07.07.2020

Warning

SoundTube speakers must be installed by a professional audio installer/contractor. For safety and for optimum audio performance, installer must follow all directions issued by SoundTube Entertainment.

Warning

Do not spec or install speaker near support beam, ventilation duct or other structure that may interfere with speaker function or dispersion.