




# SM1001

Install Instructions For:  
SM1001 Passive Subwoofer

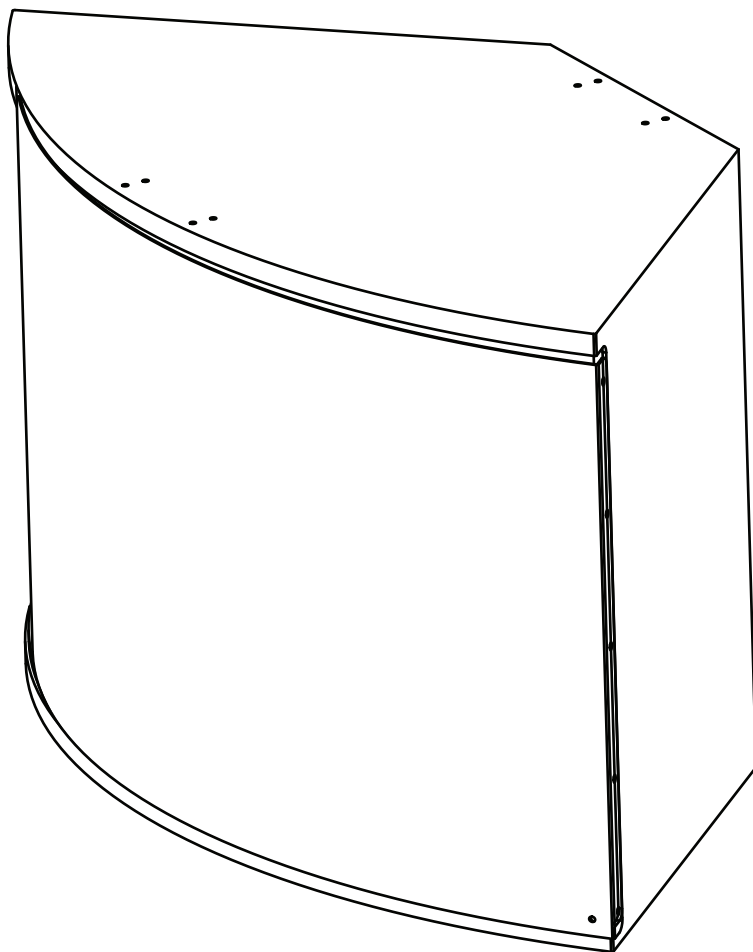


The SM1001 ships without mounting accessories.

**Optional accessories include:**

1. P350 1RU 350 Watt Subwoofer Amplifier
2. Surface Mount Bracket (AC-SM1001p-S)
3. Corner Mount Bracket (AC-SM1001p-C)

Mounting brackets include mounting instructions.

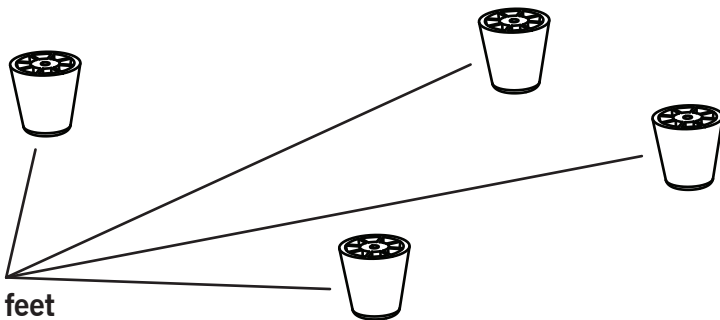

Removable feet

**Box contents: SM1001**

- 1 Subwoofer
- 4 Removable feet

© 2024 SoundTube Entertainment, Inc. All rights reserved. PN SM1001 Rev 04.30.24




**Warning**

SoundTube speakers must be installed by a professional audio installer/contractor. For safety and for optimum audio performance, installer must follow all directions issued by SoundTube Entertainment.




**Warning**


Do not spec or install speaker near support beam, ventilation duct or other structure that may interfere with speaker function or dispersion.

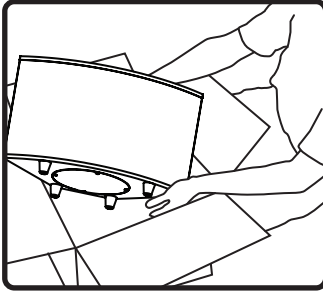


**1.** Unpack subwoofer.

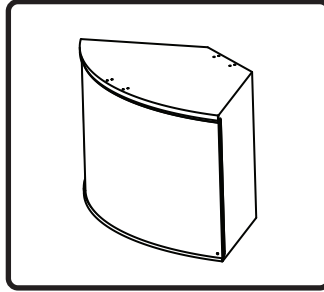

**2.** Place in desired location.

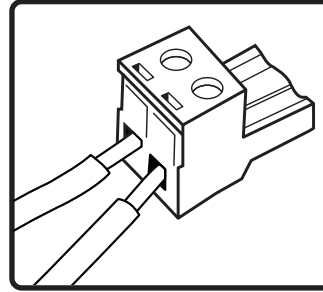

**3.** Connect speaker signal wires to the Euroblock connector.

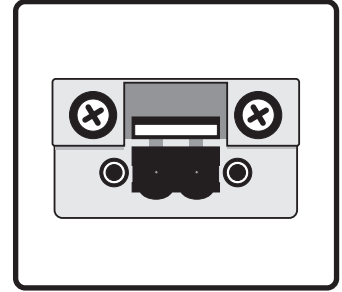

**4.** Insert the wired Euroblock connector into the connector on the back of the subwoofer. It is recommended to set the low-pass frequency on the amplifier between 80 - 150 Hz.




# AC-SM1001p-C


## Install Instructions For: SM1001 Corner Mount Bracket

Alternate optional accessory is a surface mount bracket (AC-SM1001p-S).  
This bracket is also compatible with the SM1001 Passive Subwoofer.

Security screw — 

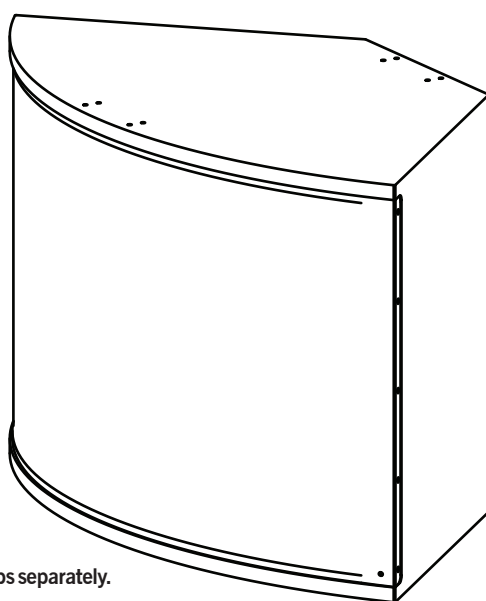

Note: Speaker ships separately.

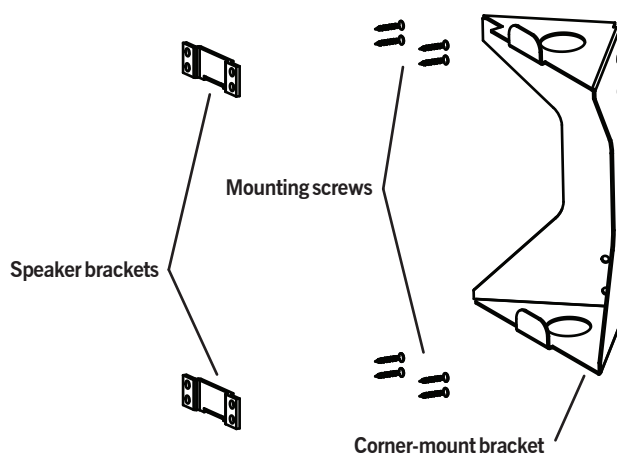

### Box contents: Corner-mount kit

- 1 Corner-mount bracket
- 2 Speaker brackets
- 8 Fasteners (1/2 inch wood screws)
- 1 Security screw

© 2024 SoundTube Entertainment, Inc. All rights reserved. PN SM1001p-C Rev04.30.24




### Warning

SoundTube speakers must be installed by a professional audio installer/contractor. For safety and for optimum audio performance, installer must follow all directions issued by SoundTube Entertainment.




### Warning


Do not spec or install speaker near support beam, ventilation duct or other structure that may interfere with speaker function or dispersion.

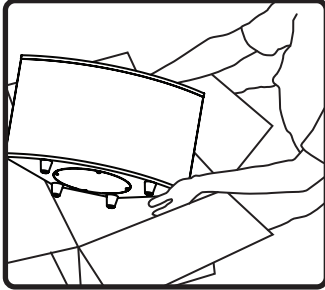


1. Unpack subwoofer and unscrew 4 feet. Remove screws from rubber plugs and replace screws to fill holes.

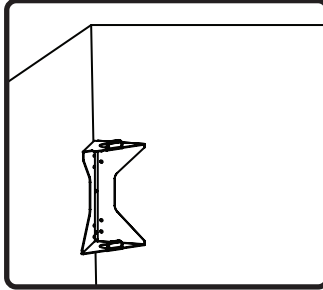


2. Choose a secure corner and mount bracket with tabs pointing up. Corner mount bracket must be mounted at least 3 inches below ceiling, beam or other top structure. Bracket accepts up to 1/4 inch lag bolts (installer supplies fasteners). **Be sure mounting tabs point up.**

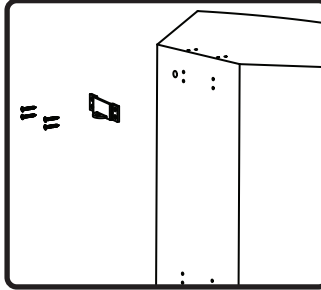


3. Mount speaker brackets to back of speaker with tabs pointing down. Use included 1/2 inch wood screws.

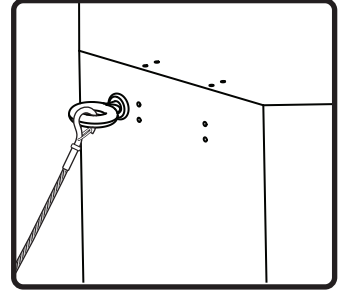


4. For a safety cable attachment, screw forged eye bolt into the 1/4-20 insert on the back of the speaker. Attach safety cable from forged eye bolt to secure mounting point on structure. Installer to supply structural fastener.

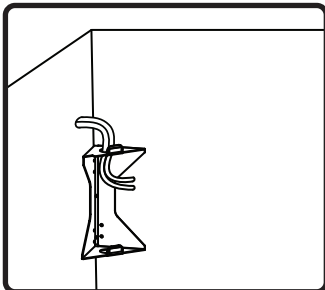


5. Run wires through hole in top or bottom of bracket. Connect wires as described in the SM1001 installation instructions.

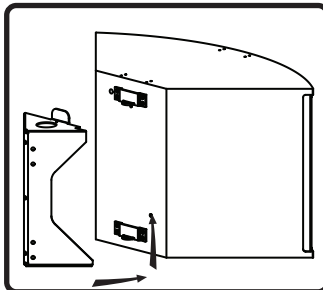

6. Slide speaker onto pre-mounted bracket.

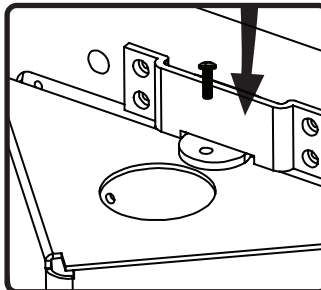

7. Install security screw.

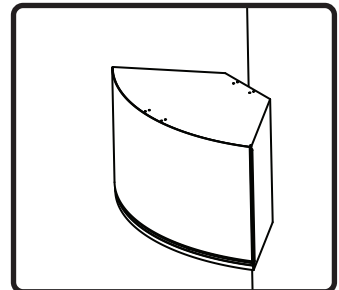


8. Done!



# AC-SM1001p-S

Install Instructions For:  
SM1001 Surface Mount Bracket

Alternate optional accessory is a corner mount bracket (AC-SM1001p-C).  
This bracket is also compatible with the SM1001 Passive Subwoofer.

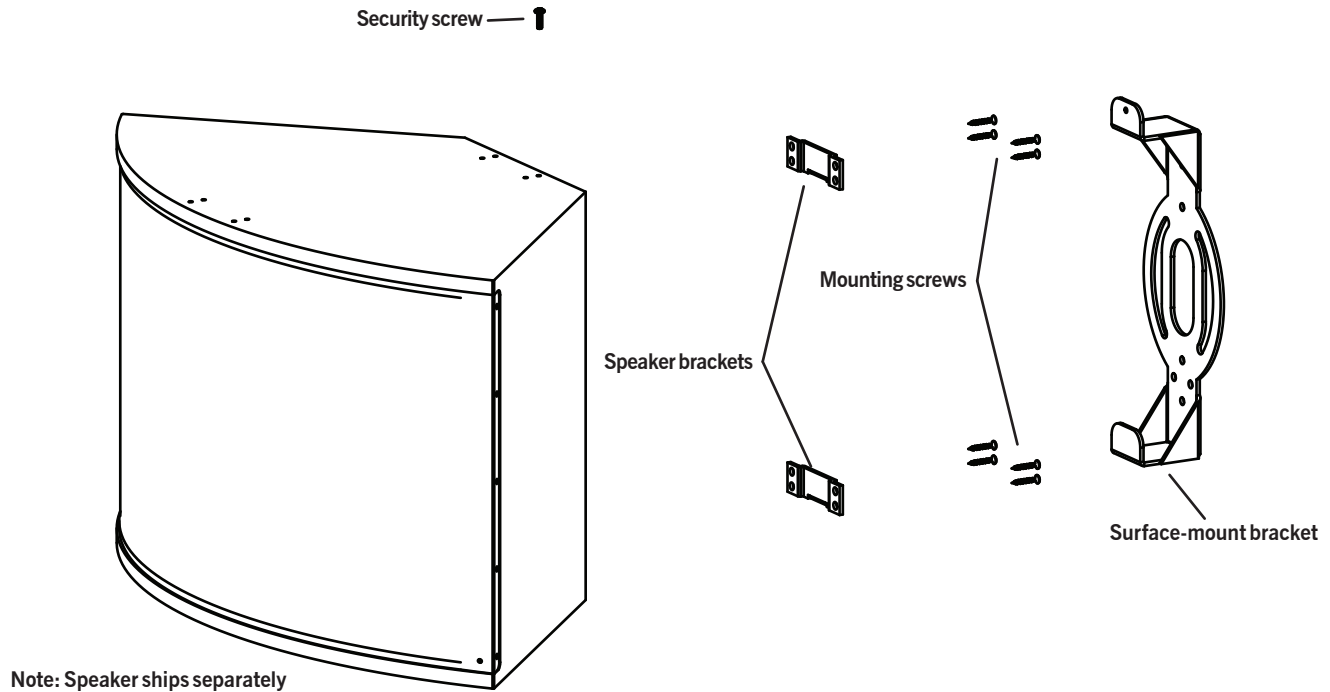

## Box contents: Surface-mount kit

- 1 Surface-mount bracket
- 2 Speaker brackets
- 8 Fasteners (1/2" wood screws)
- 1 Security screw

© 2024 SoundTube Entertainment, Inc. All rights reserved. PN SM1001p-S Rev 04.30.24




### Warning

SoundTube speakers must be installed by a professional audio installer/contractor. For safety and for optimum audio performance, installer must follow all directions issued by SoundTube Entertainment.




### Warning


Do not spec or install speaker near support beam, ventilation duct or other structure that may interfere with speaker function or dispersion.

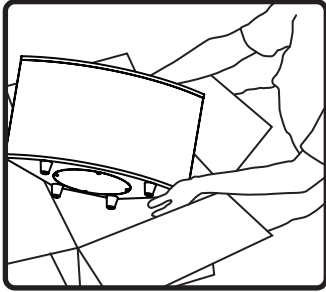


**1.** Unpack subwoofer and unscrew 4 feet. Remove screws from rubber plugs and replace screws to fill holes.

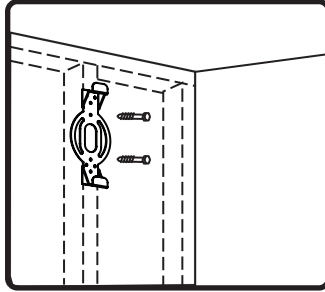


**2.** Choose a secure mounting surface with sufficient strength to reliably hold the speaker. Surface-mount bracket must be mounted at least 3 inches below ceiling, beam or other top structure. Bracket accepts 1/4 inch lag bolts (installer to supply fasteners). **Be sure mounting tabs point up.**

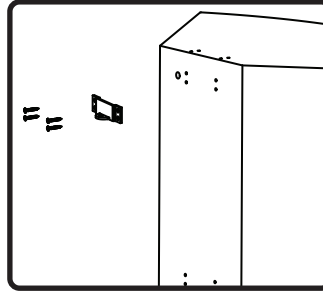


**3a.** Outward aiming: Mount speaker brackets to back of speaker with tabs down. Use included 1/2 inch wood screws.

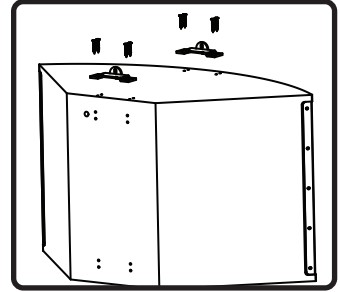


**3b.** Downward aiming: Mount speaker brackets to top of speaker with tabs facing front of speaker. Use included 1/2 inch wood screws.

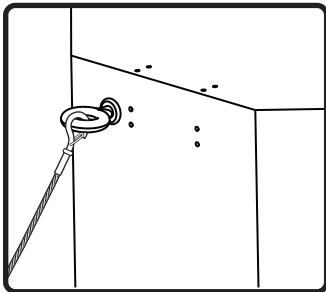


**4.** For a safety cable attachment, screw forged eye bolt into the 1/4-20 insert on the back of the speaker. Attach safety cable from forged eye bolt to secure mounting point on structure. Installer to supply structural fastener.

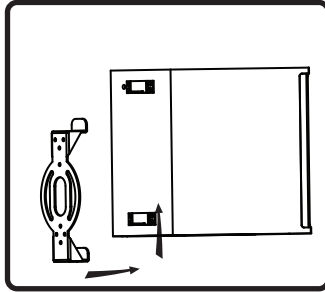

**6.** Slide speaker onto pre-mounted bracket.

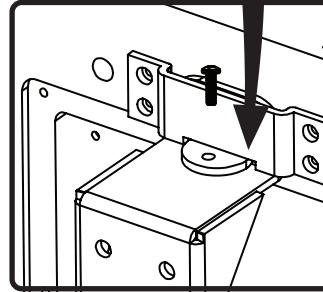

**7.** Install security screw.

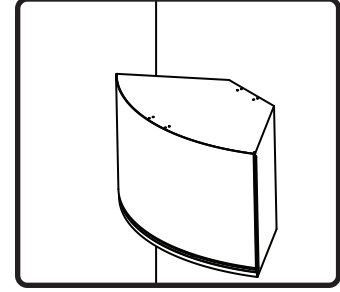

**8.** Done!